 
 


Updating the firmware on the Muvi K-Series Camera


1. Download the firmware update file from the Download Centre and unzip the file.
2. Connect an empty microSD card to your computer using a microSD card reader. The microSD card will appear as a removable disc in My Computer.
3. Copy the file 'firmware.bin' to the microSD card and eject the card from the computer.
4. Insert the microSD card into the K-Series camera and turn the camera on. Please ensure that the LCD screen is NOT connected to the camera.
5. After the camera has turned on the following message will appear:

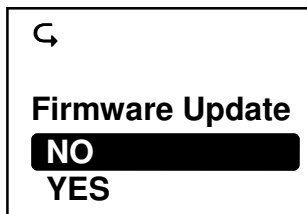

6. Press the stop record button to move to yes and press the start record button to select it. The following message will appear on the screen.

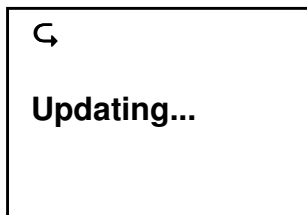

7. After 1-2 minutes the following message will appear. Press the start record button to select DONE. The camera will automatically restart.

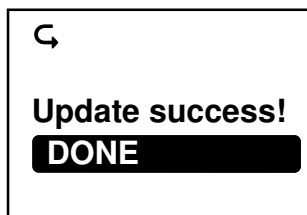

8. After the camera has restarted, turn the camera off.
9. Remove the microSD card from the camera, connect the microSD card to the computer, right click on the file 'firmware.bin' and select delete.
10. Re-insert the microSD card into the camera and turn it on. The firmware will now be updated. Please note that the camera will be restored to its original settings so you will need to adjust the camera back to your preferred settings after you have updated the firmware.